


position of wings and inner struts

you may also use flat wing profiles. cut a straight slot in that case

Nose is not needed :)

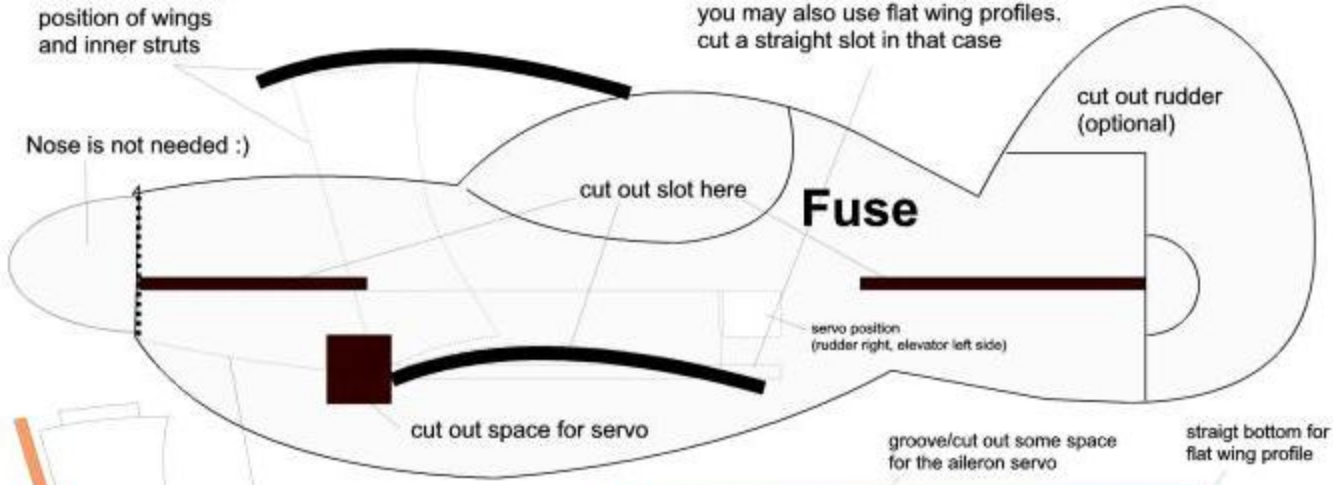


position of fuse reinforcements




inner strut (make 2)

Fuse Reinforcements (made of 2cm thick "styrodur", that is very strong styrofoam - make 2). If you don't have something like that, cut out 6x out of 6mm Depron/Blucor and laminate 2x3 pieces together.

reinforce leading edge with a bamboo skewer. glue and wrap around some clear tape.

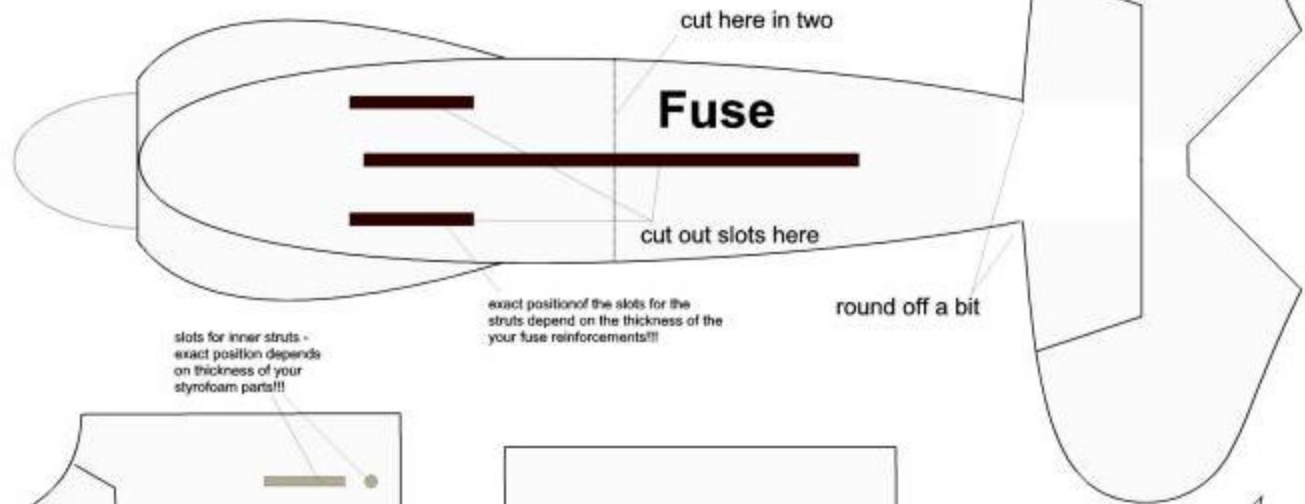

slots for inner struts - exact position depends on thickness of your styrofoam parts!!

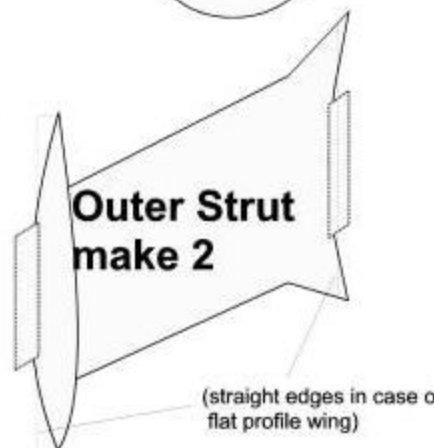

Outer Strut make 2



Shoe for optional LG